

Boreal Complete Heat



BCH-1242 Quick Start Guide

WARNING




THIS IS NOT A REPLACEMENT FOR THE USER MANUAL. INSTALLER AND USER MUST CONSULT THE COMPLETE USER MANUAL FOR ALL INSTALLATION AND OPERATION REQUIREMENTS BEFORE INSTALLING AND OPERATING THE BOREAL.

ELECTRICAL CONNECTION

1. Connect outdoor rated extension cord to Boreal.

2. Test fan control switch. Fan should be audible with switch in "ON" position.

3. Test GFCI outlet. Fan should turn off when "TEST" button is pressed. "RESET" button will turn fan back on.

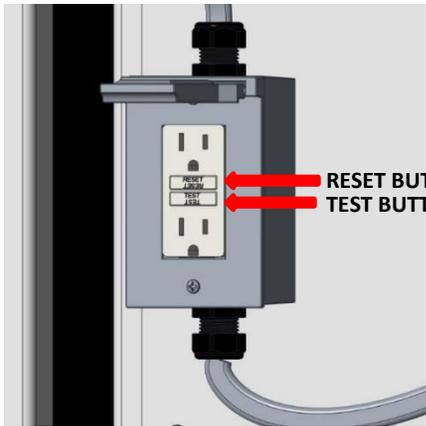
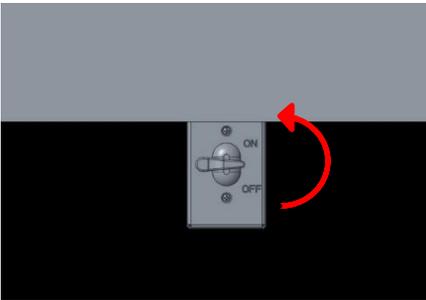
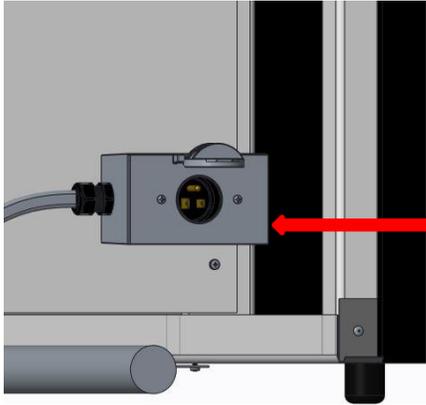


LP TANK CONNECTION

1. Locate LP regulator hose.

2. Close 20 lb. LP tank valve before connecting to Boreal.

3. Hand-tighten regulator hose onto 20 lb. LP tank. Ensure that the nut is centered.

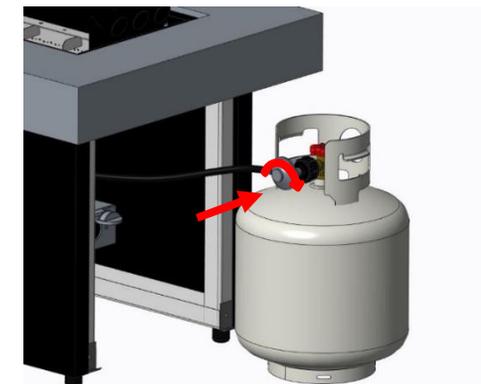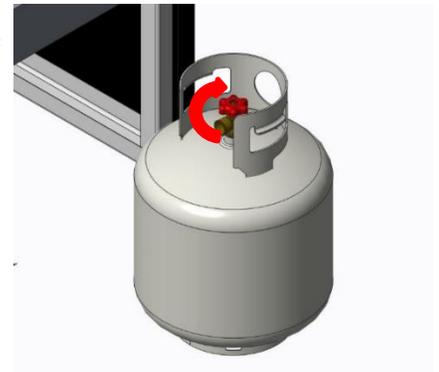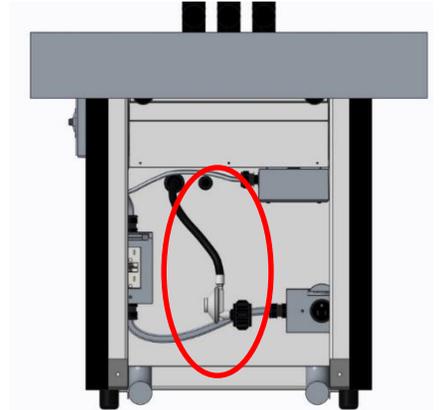

 WARNING: For outdoor use only

FIXED PIPED GAS CONNECTION

1. Locate stainless steel corrugated flex-line. Fittings will be 3/8" female flare for Manual Ignition and 1/2" female flare for DSI.

2. Connect flex-line to individual shut-off valve.

3. Tighten the fittings using two (2) wrenches. Failure to do so may result in fire.

LIGHTING INSTRUCTIONS

Manual Ignition

1. Ensure control valve is closed.
2. Open gas supply valve (either NG valve or 20 lb. LP tank valve)
3. Depress sparker button and hold.
4. Open control valve.
5. Close control valve to extinguish.



Direct Spark Ignition

1. Open gas supply valve (either NG valve or 20 lb. LP tank valve).
2. Turn control switch to "ON" position.
3. Turn control switch to "OFF" position to extinguish.



WARNING

INSTALLATION AND SERVICE SHOULD BE PERFORMED ONLY BY A QUALIFIED PROFESSIONAL.

WARNING

THIS IS NOT A REPLACEMENT FOR THE USER MANUAL. INSTALLER AND USER MUST CONSULT THE COMPLETE USER MANUAL FOR ALL INSTALLATION AND OPERATION REQUIREMENTS BEFORE INSTALLING AND OPERATING THE BOREAL.